GEM
ultrasonic diffuser user manual

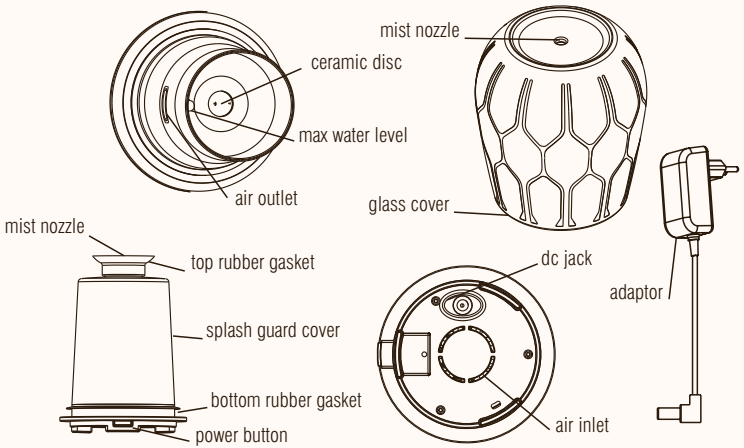

Diffuser has a set runtime of 2 hours on continuous mist or 4 hours on intermittent mist. It will also shut off automatically if water has run out or to protect the unit from overheating.

Place the diffuser on a flat, even surface when in use.

Always fill with tap water at room temperature.

Turn off diffuser before refilling water tank or lifting cover.

Avoid dripping essential oils onto glass clover, this may cause damage to the outer finish.

If diffuser is knocked over during operation, liquid may flow into the internal mechanism. Empty out water and let stand in a well ventilated area for at least 3 days to dry.

If any further problems occur, please contact Escents customer service 1.800.964.1150

OPERATION

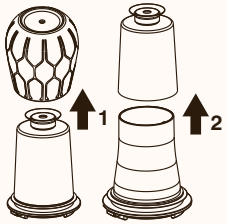

1. Remove both the glass cover and the splash guard cover.

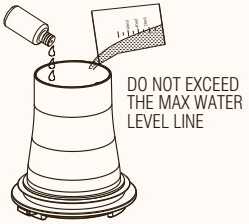

2. Fill the water tank with clean water (max 60 ml). Add 3-5 drops of your favorite essential oil or aroma blend into the water.

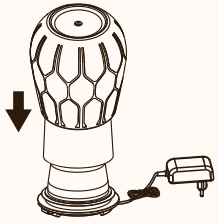

3. Replace both covers, plug in adaptor and press the power button.

DIFFUSER MODE BUTTON

1st press:	Turn on diffuser continuously (Mist and Light)
2nd press:	Mist intermittently
3rd press:	Turn off diffuser

SPECIFICATIONS

Size: 112 mm x 135 mm
Voltage: DC 24V
Power: 12 W
Water Capacity: 60 ml
Accessories: AC adaptor

TROUBLESHOOTING

symptom	possible cause	solution
no mist	power supply is not connected	plug in power adaptor & press the power button
	insufficient water	refill water tank
	too much water, exceeds the max water level line	dump excess water
	the mist outlet is blocked	clean the outlet and keep it ventilated

MAINTENANCE

Turn off the diffuser. Remove both the glass and splash guard covers. Empty water from unit. Use a damp cloth to clean the exterior of the housing. Use a clean swab or cloth to clean the water tank. USE SMALL AMOUNTS OF RUBBING ALCOHOL TO SAFELY REMOVE RESIDUE.

ESCENTS®

www.escents.ca
1.800.964.1150

GEM
diffuseur ultrasonique manuel d'instructions

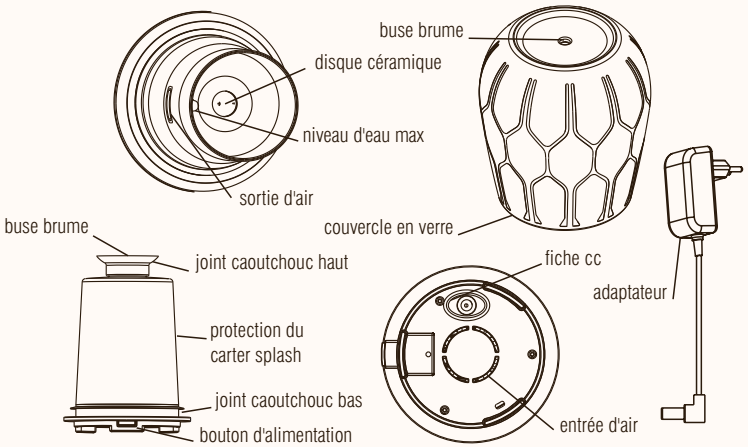

Diffuseur dispose d'un ensemble exécution de deux heures sur brume continue ou 4 heures à brume intermittent. Il sera également éteint automatiquement si l'eau est épuisé ou pour protéger l'appareil contre la surchauffe.

Placez le diffuseur sur une surface plane et lisse.

Toujours remplir avec de l'eau à température ambiante.

Éteignez diffuseur avant de remplir le réservoir d'eau ou le couvercle de levage.

Évitez gouttes d'huiles essentielles sur le trèfle de verre, ce qui peut causer des dommages à la finition extérieure.

Si diffuseur est renversé pendant opération, liquide peut s'écouler dans le mécanisme interne. Videz L'eau et laisser reposer dans un endroit bien ventilé pour au moins 3 jours à sécher.

Si d'autres problèmes surviennent, s'il vous plaît contacter Service à la clientèle Escents 1.800.964.1150

ESCENTS®

FONCTIONNEMENT

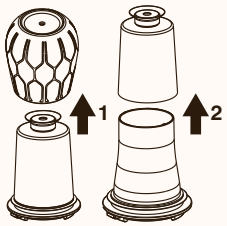

1. Retirer la fois le couvercle en verre et le protection du carter splash

2. Remplir le réservoir d'eau avec de l'eau propre (max 60 ml). Ajouter 3-5 gouttes de votre huile essentielle préférée dans l'eau.

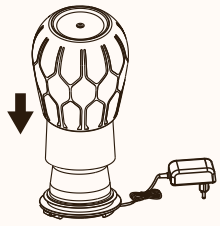

3. Remplacez les deux couvre, branchez l'adaptateur et appuyez sur le bouton d'alimentation.

DIFFUSEUR MODE BOUTON

1st presse: Allumez diffuseur en continu (Brume et Lumière)
2nd presse: Brume intermittence
3rd presse: Éteignez diffuseur

SPÉCIFICATIONS

Taille: ___ 112 mm x 135 mm
Voltage: _____ DC 24V
Énergie: _____ 12 W
Capacité de L'eau: _____ 60 ml
Accessoires: Adaptateur Secteur

DÉPANNAGE

symptôme	cause possible	solution
pas de brume	alimentation ne est pas connecté	branchez adaptateur et appuyez bouton
	eau insuffisante	remplir réservoir d'eau
	trop d'eau, dépasse la ligne de niveau d'eau max	vider l'excès d'eau
	la sortie de brouillard est bloqué	nettoyer la sortie et le maintenir ventilé

MAINTENANCE

Éteignez le diffuseur. Retirer le verre et couvre anti-projection. Vider l'eau de l'unité. Utilisez un chiffon humide pour nettoyer l'extérieur du boîtier. Utilisez un coton-tige ou un chiffon proprepour nettoyer le réservoir d'eau. UTILISEZ DE PETITES QUANTITÉS D'ALCOOL À FRICTION POUR SUPPRIMER EN TOUTE SÉCURITÉ DES RÉSIDUS.

www.escents.ca
1.800.964.1150